





1 Cut cable to length

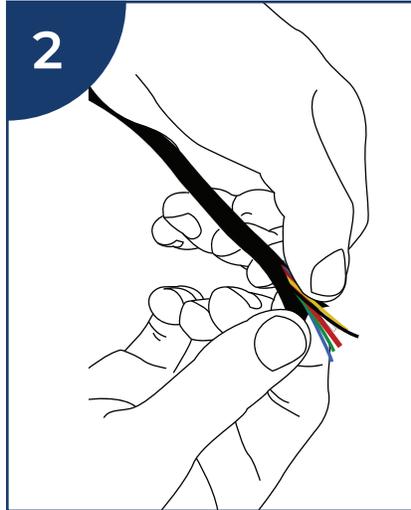



2 Slice and peel back Teflon® Jacket

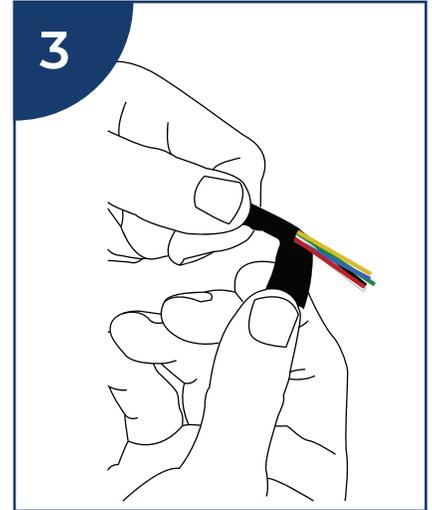


3 Cut the Teflon® Jacket

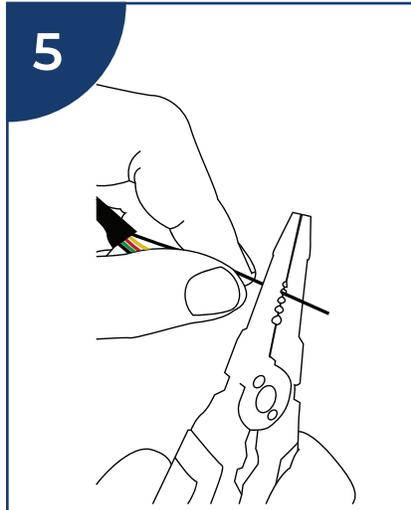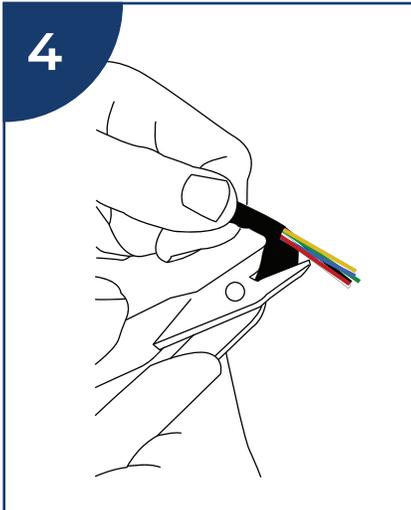


4 Expose the wire on the black cable

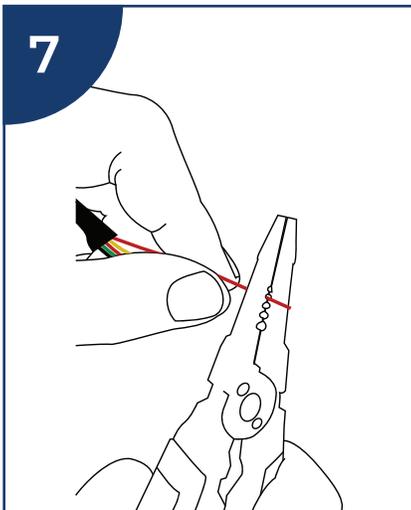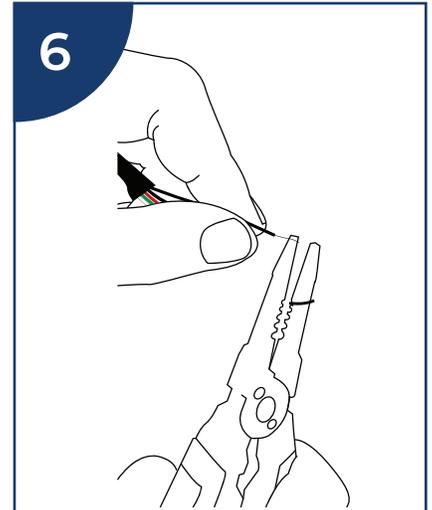

5 Expose the wire on the red cable

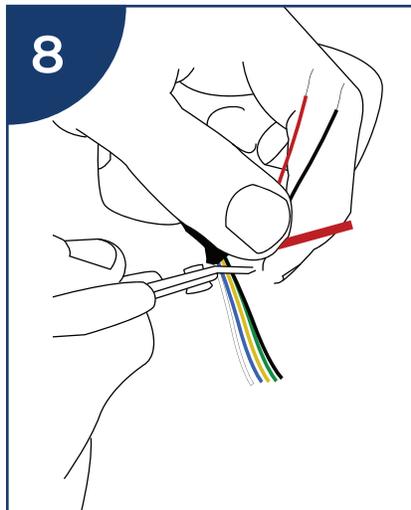


6 Cut off the remaining coloured wires

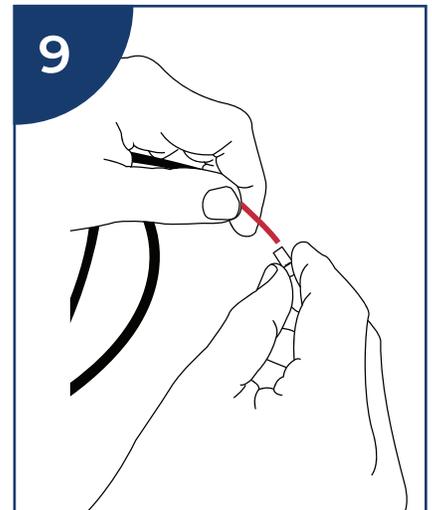


7 Take the filter off of the capillary tube after the cable is cut

LevelPro® — LP 100

Tank Level Junction Box: Wire Stripping Guide

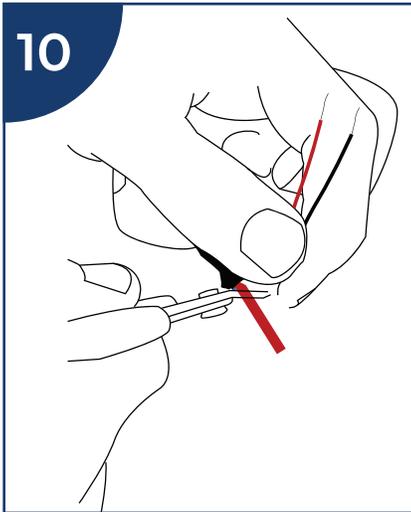

10 Cut the capillary tube on an angle

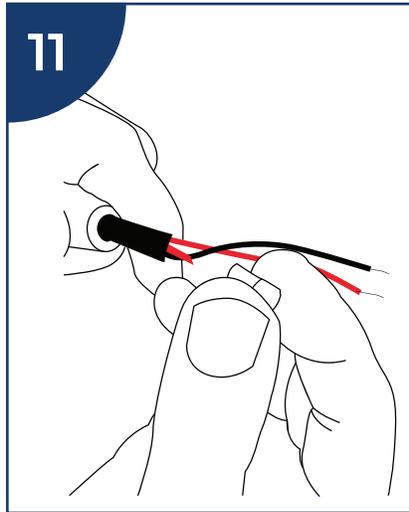

11 Put the filter back on the capillary tube after cut

